


E2 with multiple transformers

CONTROL PRINCIPLE/POSSIBLE USE OF BMS

HEATING

| (A/UR) | Function |
|----------|-----------------------------------|
| 0-2 V | Heating OFF, Fans OFF |
| 2-5 V | Heating ON, Fans ON, LOW SPEED |
| 5-9,5 V | Heating ON, Fans ON, MEDIUM SPEED |
| 9,5-10 V | Heating ON, Fans ON, HIGH SPEED |

E2 CONTROL (wet environment, manual three-step speed control) MINIB potentiometer/thermostat TH0482, heating

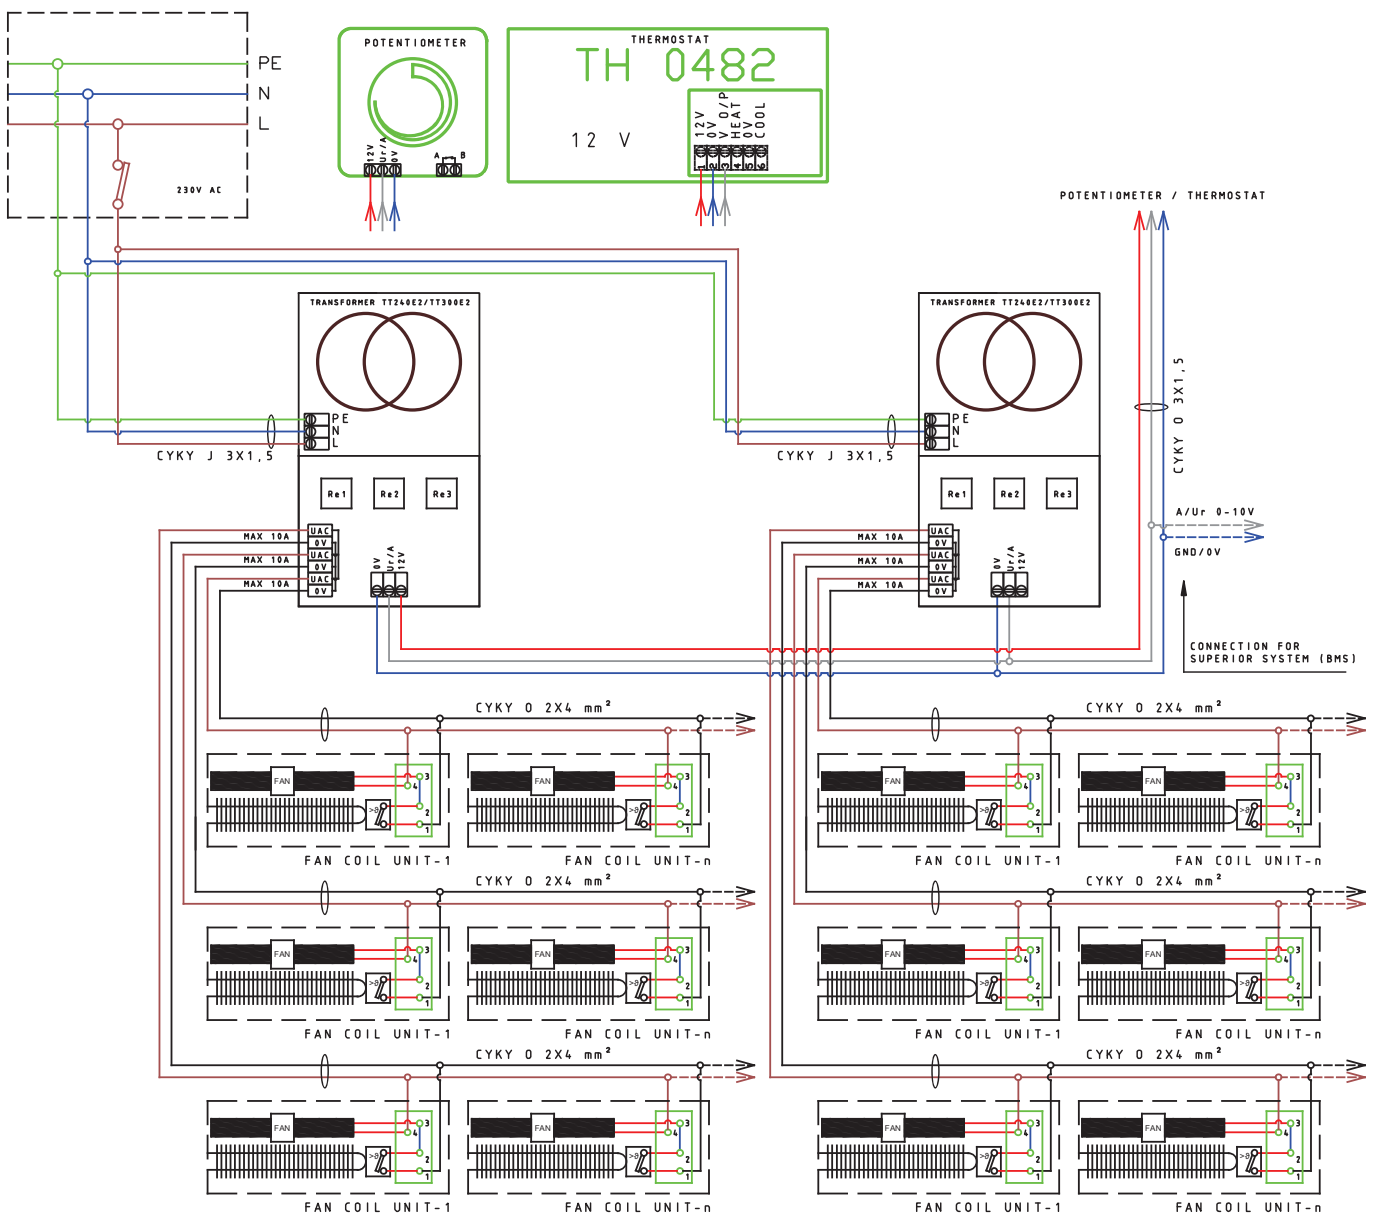

Conductor cross-sections are chosen according to current loading and the supply cable length. When using the conductor cross-sections specified in this material, the maximum acceptable distance between the convector and transformer is 15 m.